



Technical Information

Product Code D014

## **DISHWASHING MACHINE DETERGENT**

DISHWASHING MACHINE DETERGENT is a specially formulated liquid detergent for use in automatic dishwashing machines, and is suitable for cleaning most types of crockery, cookware, cutlery, glassware, etc.

DISHWASHING MACHINE DETERGENT is a aqueous blend of surfactant, alkali, and water softeners, which is suitable for use in all dish and glass washing machines, and may be used in both hard and soft water areas. The inclusion of special chelating agents and powerful sequestrants, which increase the water-softening power of the product, minimises the build up of scale in the machine. DISHWASHING MACHINE DETERGENT may also be used in commercial crate and tray washing machines.

This type of product is widely used in hotels, restaurants, bars, clubs, etc., and in all food and catering establishments. The detergent is usually injected into the machine through an automatic dosing meter that introduces and controls the correct amount of detergent, and can greatly reduce labour and machine running costs.

### **NON-FOAMING AND FREE RINSING**

### **REDUCES SCALE BUILD-UP**

### **ECONOMICAL IN USE**

### **DIRECTIONS FOR USE**

DISHWASHING MACHINE DETERGENT should be used as a 0.25 to 0.5% solution in the dishwashing machine, and with an optimum working temperature of 60 to 80 °C.

Adjust the detergent dosing meter and the temperature control to suitable settings, and operate the machine according to the manufacturer directions.

05/14 JCG